

**Operating Instructions
Small-Size Electroplating Unit
DIGITAL II and Digital V**



Jentner Plating Technology GmbH
Johann-Staib-Strasse 2 | 75179 Pforzheim – Germany
Tel.: 07231 – 418 094-0 | FAX 07231 – 418 094-77
info@jentner.de | www.jentner-plating.com

Small-Size Electroplating Unit DIGITAL II and Digital V

The universally compact electroplating units are applicable for all current plating solutions, such as Electrolytic Degreasing, Gold-, Silver-, Rhodium-, Palladium and Ruthenium plating baths; as well as for baths without precious metals like Copper and Nickel.

Dimensions and weight

Digital II: Width 500 mm, depth 320 mm, height 250 mm, weight 16 kg

Digital V: Width 820 mm, depth 350 mm, height 260 mm, weight 30 kg

The Digital II includes:

- 6 tanks, PP (3 working- and 3 rinsing tanks)
- Dimension: 150 x 100 x 150 mm, Volume 1,5 litre
- 1 safety protection cable
- 1 thermo couple with titanium holder


The Digital V includes:

- 8 tanks, PP (4 working- and 4 rinsing tanks)
- Dimension working tank 190 x 100 x 220 mm, Volume 5 litres
- Volume rinsing tank 2 litres
- 1 safety protection cable
- 1 thermo couple with titanium holder

Available accessories/spare parts (not included)

- Thermo couple / level regulator for a second heater
- Working/rinsing tank, PP
- Tank lid, PP
- Jig for rings
- Jig for chains
- Immersion titanium heater, 200 Watt
- Titanium holder for heater
- Titanium holder for thermo couple
- Anodes of stainless steel, platinized titanium, mixed oxide (MOX), silver, copper and nickel
- Filter pump MINI
- plating pen for multicolour processing
- Copper wire

Operating elements

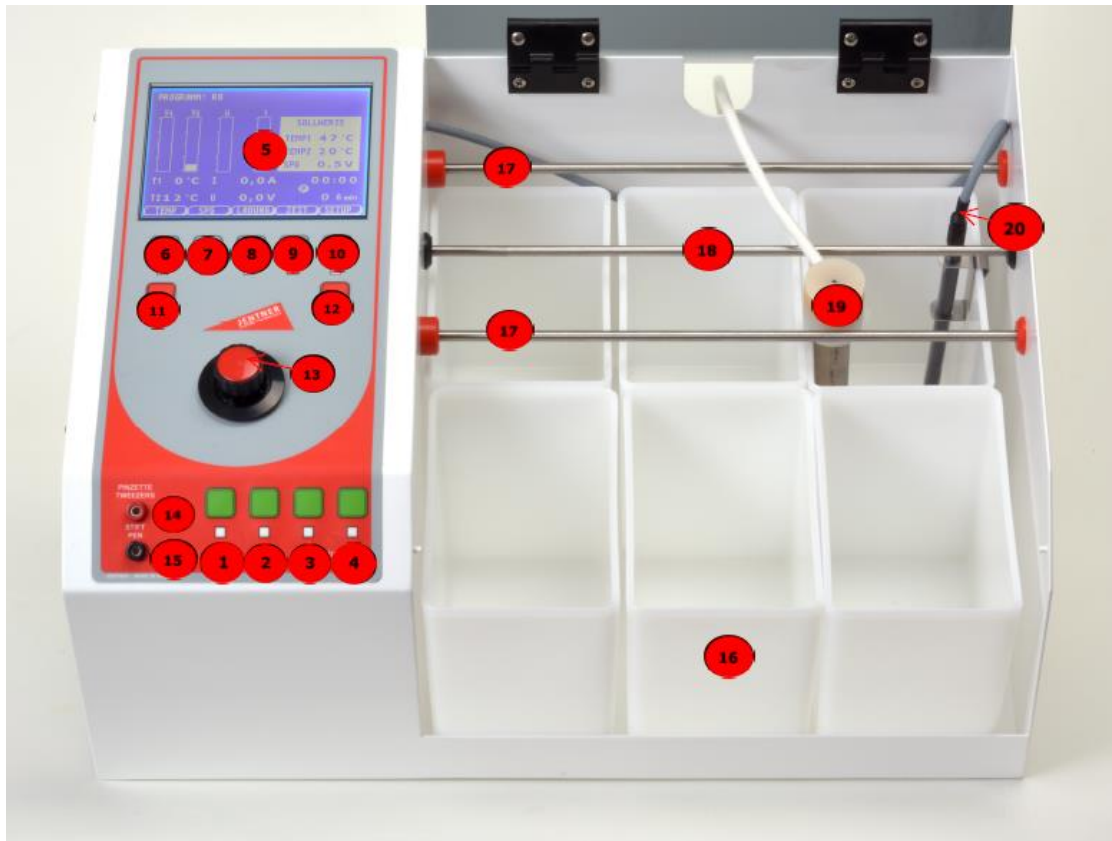

- ① Button „Start/Standby“
- ② Button “Motor/Movement“
- ③ Button „Heizung/Heater 1“
- ④ Button „Heizung/Heater 2“
- ⑤ Control panel / display
- ⑥ Button “Temp” – setting temperature
- ⑦ Button “Volt” – setting voltage
- ⑧ Button “Charge” – setting Amin (charge)
- ⑨ Button “Time” – setting of exposure time
- ⑩ Button “Basin” – selection of the working tank
- ⑪ Button “OK” – save of the set values
- ⑫ Button “Prog” – selection of the working programm
- ⑬ Rotary button for selection of parameters and values
- ⑭ Connection socket “red” for plating pen (anode)
- ⑮ Connection socket “blue” for tweezers/clamp (cathode)
- ⑯ Tanks (6/ 8 pieces)
- ⑰ Anode rods (2 x)
- ⑱ Cathode rod
- ⑲ Immersion titanium heater, 200 W
- ⑳ Thermo couple / level regulator

Side 4 – Operating Instructions DIGITAL II and V

The anode rods **17** can be pulled out very easily, the cathode rod **18** in the middle can be screwed out (clockwise).

Agitation (cathode rod)

The movement is effected by a built-in driving motor. The movement can be started with the button **2** "Motor / Movement".

Heating of the bath

The heater is fixed with a special holder in the corresponding galvanic bath. The temperature is controlled continuously by an included temperature sensor (thermo couple / level regulator). Attention! Heater and temperature sensor must always hang together in a tank. **Only for intended use!** The immersion heater is inserted for operation on the case back to a socket. The immersion heater can be turned on by a button on the control panel. The heating is regulated automatically. Attention! The level regulator turns off the heater if the volume is too low! Nevertheless, the heater must be turned on only when the working tank is filled with liquid. If the level is too low, or if the immersion heater is outside the tank, there is the risk of fire and the destruction of working tank and immersion heater. The holders of immersion heater and sensor must be fixed to the side of the tank and not at the anode rod.

Anode materials

The anodes must be fixed on the outer anode rods **17**. Attention! Pay attention for a good conductive contact. The required anode material (for example stainless steel, MOX, fine-silver, platinized titanium) depends on each plating bath. Please note the information in the data sheets of the chemical producer. Our scope of delivery contains anodes in various dimensions.

Process parameter / course of process

The parts should be put on a jig (for example we deliver a special a jig for rings or for chains) and fixed on the middle cathode rod **18**. Pay always attention for a good conductive contact. Please clean the cathode rod continuously.

The first step in the small-size-electroplating unit must be the electrolytic degreasing bath. Anything else depends on your needs. Rinse well in distilled water after each step. Always follow the information on the product data sheets.

Pen-plating

With this machine you have also the opportunity to galvanize partially. Therefore, you need the galvanizing pen and tweezers. You have to connect both to the allowed ports **14** and **15**. These ports are situated in the left front of the machine. The required voltage is set by the chosen program. The special chemicals for the pen-plating process (rhodium, silver, gold electrolytes) can be delivered by us or any other chemical producer.

Covering of the machine

The cover takes care of the sensitive and valuable plating solutions, it protects them against dust and dirt whenever the machine is not in use. Attention! When working with heated bathes the cover has to left open. If the cover is closed it is possible that the heat accumulation deforms the cover.



Side 5 – Operating Instructions DIGITAL II and V

Start up

The delivered power plug which is equipped with protective earth contacts has to be connected with the power plug port situated on the backside of the machine. Then put the other end of the cable into an electrical power point 230 V / 50 Hz (120 V / 60 Hz). The unit will be switched on with the toggle switch at the backside. The power of the rectifier is 15 V / 20 A.

Maintenance

Anode and cathode rods must be regularly cleaned with a Scotch sponge. Experience has shown that this should be done every 6-8 weeks.

Short-circuit proof / fuse

The unit is short-circuit-proof if there will be short-circuit between cathode and anode.

The fuse is located on the backside of the machine, situated in main connection socket inside fuse holder. Only micro fuse 4 A (slow blow), 115-250 V ~, 5* 20 mm must be used.

Attention

Make sure there is good ventilation in the work area.

Rinse water and used chemicals must be disposed of properly. Please refer to the legal regulations.

Please observe the instructions of the Safety Data Sheets (MSDS). Your chemical supplier provides these.

The unit must be turned off after work necessarily!

The heater should never be operated unattended!

Chemicals

The required bath chemicals are available from us or from special producers. Please read the product information of the manufacturer carefully and follow the instructions.

Programming of the DIGITAL II and Digital V

Display

T1	T2	U	I	NOM. VALUES	
				Temp. 1	40°C
				Temp. 2	10°C
				Vol	6,0 V
T1	23°C	0,0 A		time	00:45
T2	0°C	6,0 V		0,00	Amin

Temp	Volt	Charge	Timer	Basin
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Light blue	=	Visual display temperature, voltage and amp
Dark blue	=	Display of the Set Point values
Green	=	Display of the actual values
Red	=	Key designation of the process parameters

Definitions

Volt	Voltage / measurement Volt
Temp	Temperature / measurement °C
T1	Temperature 1
T2	Temperature 2
U	Voltage / measurement Volt
I	Amperage / measurement amp
Ti	Time
Prog	Program
Charge	Deposition / measurement Amin (example see below)

Example Charge Rhodiumbath

Each plating bath uses a theoretical deposition value, eg Rhodium approximately 6 mg / Amin (value see product description). You can now choose whether a deposition time should be selected, or a charge is determined.

Side 7 – Operating Instructions DIGITAL II and V

By setting the charge, the metal weight is determined. For the Rhodiumbath a setting of 10 Amin would be mathematically a deposition of 60 mg ($10 \text{ Amin} \times 6 \text{ mg} / \text{Amin} = 60 \text{ mg}$). Please note, these are purely theoretical values, which may differ from the actual values.

Functions

- 15 programs can be saved
- Display in 4 different languages (GER, ENG, SP, and F) is possible. For the choice of language press „OK“ button for 3 sec
- For the standby mode press button “start” for 3 sec
- The programs are flexible installable

15 programs can be used

EF Degreasing
Au Gold
Ag Silver
Rh Rhodium
Ru Ruthenium
Pd Palladium
Pt Platinum
Ni Nickel
Cu Copper

The programs from 1 to 6 are unnamed. For each tank up to 3 programs can be installed.

Approach to programming

1. Turn on main switch
2. Press button „progr“
3. Select with the rotary switch the desired program
4. Confirm with “ok” button
5. Now enter the working parameters. Press the respective button (time, voltage, etc. see below) and select the value using the rotary switch. The entries in each case confirm with "ok":

„Temp“ Temperature (if the bath must be heated)
„Volt“ Voltage
„Time“ Choose between minute and second (or choose charge see above)

If no time is entered permanent mode is chosen automatically.



6. When all values are entered, press button „progr“ for 3 seconds to save the settings. The display shows the previously entered values
7. Press button „save“
8. Confirm with „OK“ and return to the actual values
9. Start the process with „start“

Control functions

1. Heat protection / level regulator

If the level is too low in a heated bath the heater is switched off by the thermo couple. The display shows a warning signal over the full area. The signal can be confirmed with “ok” but the heater remains off. An overheating of heater or tank is avoided. When the bath is refilled the heater will be automatically turned on.

2. Total charge

For each basin a total charge can be set. So a metal content is determined, which can be deposited. When this value is exceeded a warning appears % and the bath should be regenerated. To set the total charge press button “Basin” for 3 sec and enter the desired value and (important!) basin. After this the display shows the signal %

If the total charge is matched with a desired program (by setting the number of the basin in that program) the control is done for this process. Do as following:

1. Press button “basin” 3 seconds
2. Enter the desired value and basin
3. Press “save”
4. Leave with “OK”
5. Press button “progr” and choose the desired one
6. Set the same basin as in point 2
7. Leave with “OK”
8. Press “progr” for 3 seconds and save the process
9. Leave with “OK”

If basin number 0 is selected you can work manually (without control).

Example total charge Rhodiumbath








The deposition rate of the bath is 6 mg / Amin (see data sheet of the chemical supplier). For this the total charge of 200 Amin can be set. That means that after receiving this value 1200 mg of rhodium are deposited ($6 \text{ mg/Amin} \times 200 \text{ Amin} = 1200 \text{ mg Rh}$) and the bath can be regenerated accordingly. A consisted quality is ensured. Rinsing losses are not taken into account!

Heaters

Up to max. two heaters can be connected with the corresponding sensors on the unit. These can be used in any tank. The tanks where heater and sensor hang will be heated. The heaters can be turned on at the control panel. The display shows a signal as soon as a heater is active.

Attention: Heaters only for intended use.

Symbols of the display

-  Amin
-  Total charge exceeded
-  Total charge all right
-  Heater on
-  Motion on
-  Unit on
-  Permanent operation